



Canon PowerShot SD1000 Battery Replacement

This guide details the removal of the rechargeable Canon battery. The removal is quick and does not require any use of tools.

Written By: Nick Tompkins



Step 1 — Battery



- Turn the camera over to see the bottom of the camera.
- Slide battery cover open.

Step 2



- The battery cover should push out.
- Prop open battery cover.

Step 3



- Now, the battery cover should flop over and rest as shown.

Step 4



- Flip the plastic lever holding the battery as shown.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 06:06:32 AM.